






Stage 3



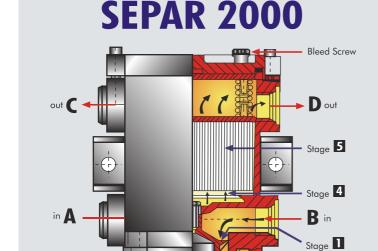

WATER SEPARATOR AND FUEL FILTER

In 1992 Willibrord Lösing Filter-Technik designed the next generation of SEPAR Filters called the SEPAR 2000 Series of fuel filters, as an effective system for the separation of water and particulate from fuel. Both water and particulate matter can result in high wear and tear of fuel pumps and injectors, resulting in reduced reliability and expensive engine repairs.

FUNCTION OF THE SEPAR 2000

The separation and filtration process takes place according to a new, unique and patented concept, which is applied throughout all of the range. The SEPAR 2000 series is outstanding due its small physical size in relation to the effective flow rate.

The SEPAR 2000 should be installed the suction side of the fuel system, between the fuel feed tank and the engine mounted fuel lift pump.

Fuel enters the filter through either port A or B depending which is more convenient for installation, and using the plug provided to seal off the unused port.

Stage 1

From the inlet port, fuel flows through the interior vane system which imparts a circular motion to the fuel.

Stage 2

Still in the circular motion fuel reaches the bowl section, where, due to this centrifugal motion water droplets and heavier particles (down to 30 microns size) are forced to the wall of the bowl, eventually settling in the bottom of the bowl.

Stage 3

In this stage the fuel has to pass the vane system positioned on the "outside" of the central housing. Due to the differing length of the vanes and the twofold rapid change of fuel direction, smaller water droplets and finer particles will settle on the vanes. These settlements will agglomerates and when heavy enough fall to the bottom of the bowl. Already at this point the major portion of any contaminants in the fuel have been separated.

Stage 4

Stage 2

Drain Valve

(push in and turn yellow knob) Just below the filter element the flow area of the filter is increased significantly thus reducing the fuel flow rate. This calming effect allows even smaller water droplets and particulate to fall out settling on the inner surfaces of the housing forming larger droplets which eventually fall into the bottom of the bowl by gravity.

Due to the above described pre-separation process, the major portion of water and particulate present in the fuel will be in the bowl or on the inner surface of the filter, thus greatly extending the filter element life.

Stage 5

The final filtration of the remaining water and particulate still contained in the fuel will be effected by a replaceable filter element. These filter elements are produced from a special filter media and are available in different pore sizes.

The clean fuel leaves the filter via outlet ports C or D (the outlet port not used should be sealed with the plug provided).

BACK FLUSHING PROCESS

Switch off the engine. Open the bleed valve on top of the filter lid (note: If fuel tank is above the top of the SEPAR filter close the fuel feed valve if fitted) then open the drain valve fitted to the bowl. The clean fuel between the filter lid and the clean side of the element will flush back through the filter element and "wash off" the collected water droplets and particles from the filter media at the same time fuel that is draining from the bowl is carrying contaminates out with it. Close the drain valve, open the fuel feed valve and prime the fuel system. Close the bleed valve. Now the engine can be restarted.

If the engine is not able to reach maximum revolutions then the element requires to be replaced.

SEPAR 2000

INSTALLTION OF THE FILTER



The SEPAR 2000 can be easily installed. The SEPAR 2000 should be installed on the suction side of the fuel system, between the fuel feed tank and the engine mounted fuel lift pump.

- 1 Install the SEPAR 2000 filter in an accessible position (any other primary filter has to be removed from the suction line)
- 2 The SEPAR 2000 housing has too inlet and too outlet ports to give options on installation position.
- 3 The ideal position for the filer is at the same height as the lift pump. However if the top of the fuel tank is above this position a "full flow" ball valve should be fitted, before the filter so that the fuel flow can be shut off to allow filter maintenance.
- 4 In application where the fuel level is below the filter it is still advisable to install a "full flow" ball valve to prevent fuel draining back into the fuel tank.

After filter installation on system without a positive head of fuel, remove the filter lid and fill with fuel to assist in priming the system.

- Avoid sharp 90-degree bends on the fuel system piping as these increase system pressure drop, as does any reduction in the internal diameter of fuel piping.
- 6 Please use only fittings with o-ring seals (contained in our program of accessories). Do not use hollow bored screws with copper rings as they are difficult to seal and result in a high pressure drop.
- **7** Please consider a clear space of 60mm above the housing/filter lid to replace the filter element.

Important:

Only clean diesel fuel should be used for cleaning the clear plastic bowls, certain cleaning materials can attack the plastic material and have a detrimental effect.

The SEPAR 2000 filters are available in a special biodiesel (Cannola). Resistant versions on request.

MAIN FEATURES

- Availablewith various flow rates from 1-260 1/min. Thereby offering fuel filter for an engine performance range of 5 to 10,000kw.
- Compact size, various ports, simple installation.

- High separation efficiency of water contained in the fuel. (No water could be proven acc. toRTÜV testing.)
- Due to the backflushing extended service time of the filter elements.
- The SEPAR 2000 Filter protects the injection pump and injection nozzles.
- Easy maintenance.

APPLICATION OF THE FILTER

- Automotive industry, trucks, busses, mobile cranes, municipality vehicles etc.
- Construction equipment, compressor sets, agricultural equipment, fork lift trucks etc.
- Marine propulsion
- Stationary engines generators, welding and pumping installations etc.
- Mining applications
- Special versions for certain applications are available

MARINE APPLICATIONS

For this purpose switchable filters are available. A water level indication can be supplied optionally.

PETROL APPLICATIONS

For petrol engines, special versions are available.

COLD WEATHER

For cold ambient temperatures, SEPAR 2000 filters are available with an effective heating system.

TEST AND CERTIFICATES

- Rheinisch-Westfälischer TÜV
- Kraftfahrt-Bundesamt Flensburg
- German Technical Department for Army Ship and Marine Weapons
- Germaischer Lloyd Type Approval Certificate
- Bureau Veritas Type Approval Certificate
- RINA

SEPAR 2000 DELIVERY PROGAM

FLOW RATES				OPTIONS	
2000/5	=	5 I/min or	300 l/h	= Clear bowl	MK=Metal bowl with contacts
2000/5/50	=	5 I/min or	300 l/h	U = Switchable filter	s= Potentiolfree probe for water level indication
2000/10	=	10 I/min or	600 I/h	D = Clear bowl with heat shield (RINA-version)	H=Heated filter 12V or 24
2000/18	=	18 I/min or	1080 I/h	K = Clear bowl with contacts for water level indication	
2000/40	=	40 I/min or	2400 I/h	KD = Clear bowl, heat shield, contacts for water level	
2000/130	=	130 I/min or	7800 i/h	M = Metal bowl	

SEPAR 2000

AVAILABLE VERSIONS - DIESEL FILTER

SINGLE UNITS	SWITCHABLE UNITS	DESCRIPTION	L/MIN	SINGLE UNITS Thread in-and outlet	SWITCH. UNITS Thread In-and Outlet
SWK-2000/5	SWK-2000/5/U	Clear bowl	5	M16x1,5	12 mm Pipe φ
SWK-2000/5/50	SWK-2000/5/50/U	Clear bowl	5	M16x1,5	12 mm Pipe φ
SWK-2000/5/50/K	SWK-2000/5/50/UK	Clear bowl, contact	5	M16x1,5	12 mm Pipe φ
SWK-2000/5/50/D	SWK-2000/5/50/UD	Clear bowl, heat shield	5	M16x1,5	12 mm Pipe φ
SWK-2000/5/50/KD	SWK-2000/5/50/UKD	Clear bowl, contacts, heat shield	5	M16x1,5	12 mm Pipe φ
SWK-2000/5/50/M	SWK-2000/5/50/UM	Metal bowl	5	M16x1,5	12 mm Pipe φ
SWK-2000/5/50/MK	SWK-2000/5/50/UMK	Metal bowl, contacts	5	M16x1,5	12 mm Pipe φ
SWK-2000/5/50/H		Clear bowl, heated filter	5	M16x1,5	
SWK-2000/10	SWK-2000/10/U	Clear bowl	10	M 22 x 1,5	15 mm Pipe φ
SWK-2000/10/K	SWK-2000/10/UK	Clear bowl, contacts	10	M 22 x 1,5	15 mm Pipe φ
SWK-2000/10/D	SWK-2000/10/UD	Clear bowl, heat shield	10	M 22 x 1,5	15 mm Pipe φ
SWK-2000/10/KD	SWK-2000/10/UKD	Clear bowl, contacts, heat shield	10	M 22 x 1,5	15 mm Pipe φ
SWK-2000/10/M	SWK-2000/10/UM	Metal bowl	10	M 22 x 1,5	15 mm Pipe φ
SWK-2000/10/MK	SWK-2000/10/UMK	Metal bowl, contacts	10	M 22 x 1,5	15 mm Pipe φ
SWK-2000/10/H		Clear bowl, heated filter	10	M 22 x 1,5	
SWK-2000/18	SWK-2000/18/U	Clear bowl	18	M26x1,5	22 mm Pipe φ
SWK-2000/18/K	SWK-2000/18/UK	Clear bowl, contacts	18	M26x1,5	22 mm Pipe φ
SWK-2000/18/D	SWK-2000/18/UD	Clear bowl, heat shield	18	M26x1,5	22 mm Pipe φ
SWK-2000/18/KD	SWK-2000/18/UKD	Clear bowl, contacts, heat shield	18	M26x1,5	22 mm Pipe φ
SWK-2000/18/M	SWK-2000/18/UM	Metal bowl	18	M26x1,5	22 mm Pipe φ
SWK-2000/18/MK	SWK-2000/18/UMK	Metal bowl, contacts	18	M26x1,5	22 mm Pipe φ
SWK-2000/40/M	SWK-2000/40/UM	Metal bowl	40	M 33 x 1,5	35 mm Pipe φ
SWK-2000/40/MK	SWK-2000/40/UMK	Metal bowl, contacts	40	M 33 x 1,5	35 mm Pipe φ
SWK-2000/40/MS	SWK-2000/40/UMS	Metal bowl, potential-free probe	40	M 33 x 1,5	
SWK-2000/40/2/MK		Metal bowl, contacts	80	42mm pipe φ	
SWK-2000/130/MK	SWK-2000/130/UMK	Metal bowl, contacts	130	2" pipe	2" Pipe φ
SWK-2000/130/MS	SWK-2000/130/UMS	Metal bowl, potential-free probe	130	2" pipe	2" Pipe φ
SWK-2000/130/2/MK		Metal bowl, contacts	260	3" pipe	

- Other versions could be supplied on request
- The SEPAR 2000 filter is available with different pore sizes of filter media
- Sizing of the SEPAR 2000 filter:

The flow rate I/mm of the filter has to be higher than the maximum capacity of engine mounted fuel lift pump.

Fi. Maximum flow rate of the fuel lift pump 8 I/min - corresponding filter SWK 2000/10 with a maximum flow rate of 10 /min

 It is advisable to use switchable filters for marine applications, especially when a vessel is fitted with only one propulsion engine.

